



Fitting Instructions – Soft Close Magnetic Catch

Step 1: Fixing the Magnetic Catch

Option 1: Using the Drill Template (Recommended)

1. Print the installation template (page 2).
2. Align it with the inside edge of the cabinet and tape it in place.
3. Drill a 2mm pilot hole at the marked position.

Option 2: Manual Positioning


1. Measure 31mm back from the inside front edge of the cabinet.
 2. Measure 21.5mm across to mark the screw positions.
 3. Drill a 2mm pilot hole.
 4. Insert a 4.5mm screw, leaving 4-5mm exposed.
 5. Align the keyhole slot on the catch with the screw and slide down to lock in place.
 6. Secure with a 3.5 x 20mm screw in the back fixing hole.
-

Step 2: Testing & Adjustments

1. Open and close the door to check soft-close pistons engage properly.
2. Ensure the magnet or adhesive plate aligns correctly with the catch.
3. Adjust if needed.



Installation Template

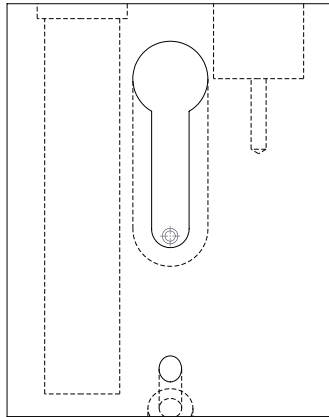

Print template using the 'Actual size' setting for accurate size

